

Change Controls from Left to Right Side on Treanna

Step (1). Remove sheer tree clips from both end caps (top of blind) using scissors or pliers.



Step (2). Tap the left end cap out from the headrail and remove from the roller.



Step (3). Unscrew the clutch from the end cap.



Step (4). Tap the right end cap out from the headrail, remove the washer from the end cap, and the idle end plug from the roller.




Step (5). Place washer on left end cap and idle end plug in left side of roller.




Step (6). Screw clutch into right end cap.



Step (7). Tap left side end cap back into headrail.

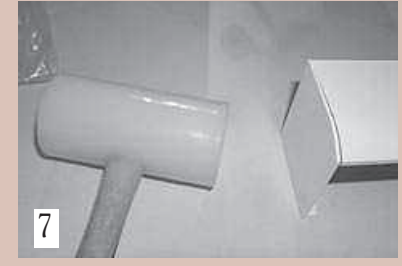

Step (8). Insert right end cap with clutch, into right side of the roller with fabric in fully rolled position.

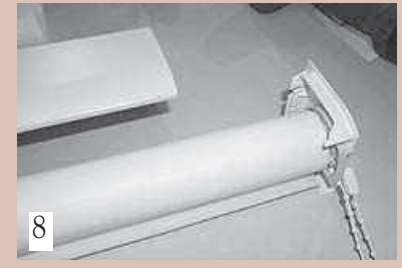

Step (9). Place left end of roller into left end cap and tap right end cap into headrail, thus, the controls have been changed from left to right.



(Note: adjust bead cord connectors accordingly, now.)